

E506

Wired room thermostat for any heating / air conditioning system.




- mainly for control of electric heating mats in bathrooms / living rooms
- both air and floor temperature sensors used to control the heating device
- three modes of operation:
 - air temperature controlled
 - floor temperature controlled
 - air temperature controlled / floor temperature limited
- ability to switch manually to day/night mode
- backlit LCD
- thermostat shut-down after heating season
- flush-mounted

| | |
|--------------------------------|---|
| Device controlled | CH / air conditioning systems |
| Power supply | 200 - 240 V 50 Hz |
| Rated load | 16 (3) A 230 V 50 Hz |
| Rated power consumption | 0,8 W |
| Output | voltage-free SPDT relay |
| Temperature measurement range | -10°C...+50°C |
| Temperature control range | +5°C...+35°C (air), +5°C...+45°C (floor) |
| Temperature control accuracy | 0,5°C |
| Temperature reading accuracy | 0,1°C |
| Temperature control hysteresis | air - 0,2 / 0,4 / 0,6 / 0,8 / 1°C, floor - 0,6 / 1 / 2 / 3°C |
| Status visualization | backlit LCD, LED diode |
| Operating temperature range | +5°C...+45°C |
| Storage temperature range | 0°C...+65°C |
| IP rating | IP 20, class II protection against electric shocks |
| Colour | white, RAL9010 |
| Mount method | flush-mounted in Ø 60 mm |
| Weight | 115 g |
| Certificates/standards | complies with the EMC and LVD Directives |
| Warranty period | 2 years |
| Dimensions (W/H/D) mm | 87/87/51,5 |
| Packing list | Euroster 506 thermostat, instructions, 2,5 m floor temperature sensor cable |


The simplified diagrams presented do not contain all of the elements necessary to correctly install the device.

FLOOR HEATING SYSTEM

Floor temperature sensor connected via 2.5 m cable

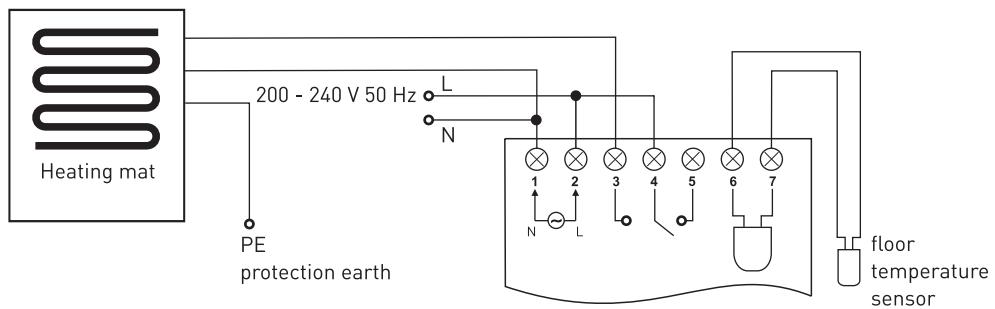

GAS-FIRED BOILER

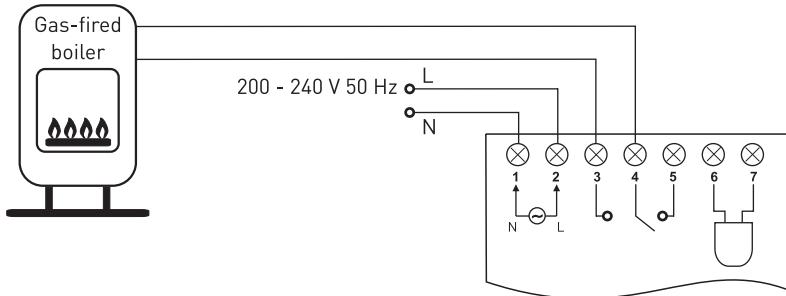

CH / AIR CONDITIONING SYSTEM

