

EN

EU-F-2z v1
USER'S MANUAL

TECH
CONTROLLERS

TECH
CONTROLLERS

Central headquarters:
ul. Biała Droga 31, 34-122 Wieprz
Service:
ul. Skochnica 120, 32-652 Bulołowice
phone: +48 33 875 93 80
e-mail: service@techsterownik.pl

WARRANTY CARD

TECH company ensures to the Buyer proper operation of the device for the period of 24 months from the date of sale. The Guarantor undertakes to repair the device free of charge if the defects occurred through the manufacturer's fault. The device should be delivered to its manufacturer. Principles of conduct in the case of a complaint are determined by the Act on specific terms and conditions of consumer sale and amendments of the Civil Code (Journal of Laws of 5 September 2002).

CAUTION! THE TEMPERATURE SENSOR CANNOT BE IMMERSSED IN ANY LIQUID (OIL ETC). THIS MAY RESULT IN DAMAGING THE CONTROLLER AND LOSS OF WARRANTY! THE ACCEPTABLE RELATIVE HUMIDITY OF THE CONTROLLER'S ENVIRONMENT IS 5-85% REL.H. WITHOUT THE STEAM CONDENSATION EFFECT. THE DEVICE IS NOT INTENDED TO BE OPERATED BY CHILDREN.

The costs of unjustifi able service call to a defect will be borne exclusively by the buyer. The unjustifi able service call is defi ned as a call to remove damages not resulting from the Guarantor's fault as well as a call considered unjustifi able by the service after diagnosing the device (e.g. damage of the equipment through the fault of the client or not subject to Warranty), or if the device defect occurred for reasons lying beyond the device.

In order to execute the rights arising from this Warranty, the user is obliged, at his own cost and risk, deliver the device to the Guarantor along with a correctly fi lled-in warranty card (containing in particular the sale date, the seller's signature and a description of the defect) and sales proof (receipt, VAT invoice, etc.). The Warranty Card is the only basis for repair free of charge. The complaint repair time is 14 days.

When the Warranty Card is lost or damaged, the manufacturer does not issue a duplicate.

.....
seller's stamp

.....
date of sale

SAFETY

Before using the device for the first time the user should read the following regulations carefully. Not obeying the rules included in this manual may lead to personal injuries or controller damage. The user's manual should be stored in a safe place for further reference. In order to avoid accidents and errors it should be ensured that every person using the device has familiarized themselves with the principle of operation as well as security functions of the controller. If the device is to be sold or put in a diff erent place, make sure that the user's manual is there with the device so that any potential user has access to essential information about the device.

The manufacturer does not accept responsibility for any injuries or damage resulting from negligence; therefore, users are obliged to take the necessary safety measures listed in this manual to protect their lives and property.

⚠ WARNING

- The device should be installed by a qualified electrician.
- The regulator is not intended to be used by children.
- It is a live electrical device. Make sure the regulator is disconnected from the mains before performing any activities involving the power supply (plugging cables, installing the device etc.).
- Any use other than specified by the manufacturer is forbidden.

We are committed to protecting the environment. Manufacturing electronic devices imposes an obligation of providing for environmentally safe disposal of used electronic components and devices. Hence, we have been entered into a register kept by the Inspection For Environmental Protection. The crossed-out bin symbol on a product means that the product may not be disposed of to household waste containers. Recycling of wastes helps to protect the environment. The user is obliged to transfer their used equipment to a collection point where all electric and electronic components.



EU DECLARATION OF CONFORMITY

Hereby, we declare under our sole responsibility that **EU-F-2z v1** manufactured by TECH, head-quartered in Wieprz Biała Droga 31, 34-122 Wieprz, is compliant with Directive 2014/35/EU of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits (EU OJ L 96, of 29.03.2014, p. 357), Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of Member States relating to electromagnetic compatibility (EU OJ L 96 of 29.03.2014, p.79), Directive 2009/125/EC establishing a framework for the setting of ecodesign requirements for energy-related products as well as the regulation by the MINISTRY OF ENTREPRENEURSHIP AND TECHNOLOGY of 24 June 2019 amending the regulation concerning the essential requirements as regards the restriction of the use of certain hazardous substances in electrical and electronic equipment, implementing provisions of Directive (EU) 2017/2102 of the European Parliament and of the Council of 15 November 2017 amending Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (OJ L 305, 21.11.2017, p. 8).

For compliance assessment, harmonized standards were used:
PN-EN IEC 60730-2-9:2019-06, PN-EN 60730-1:2016-10.

Paweł Jura

Janusz Master
Prezesi firmy

Wieprz, 22.02.2021

TECHNICAL DATA

Power supply	230V ± 10%/50Hz
Max. power consumption	0,5W
Potential-free cont. nom. out. load	230V AC / 0,5A (AC1) * 24V DC / 0,5A (DC1) **
Temperature adjustment range	5°C ÷ 35°C
Measurement error	± 0,5°C

* AC1 load category: single-phase, resistive or slightly inductive AC load.
** DC1 load category: direct current, resistive or slightly inductive load.


The pictures and diagrams are for illustration purposes only.
The manufacturer reserves the right to introduce some changes.

DESCRIPTION

The EU-F-2z v1 room regulator is intended for controlling the heating device. Its main task is to maintain the pre-set room temperature by sending a signal to the heating device when the room temperature has been reached. The regulator is intended to be mounted in a frame. Two colour versions are available: black and white.


Controller assets:

- large, easy-to-read display
- front panel made of glass
- built-in temperature and humidity sensor
- intended to be mounted in a frame

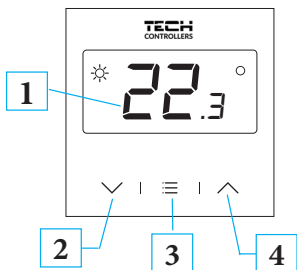

1. Display - current temperature/humidity
2. Button ∇
3. Menu button \equiv
4. Button \wedge

Current temperature is displayed on the screen. Use the Menu button (in the middle) to display current humidity.

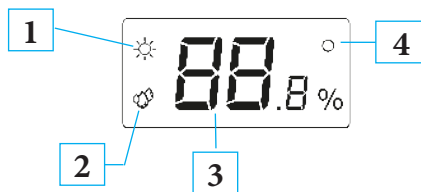

1. Sun icon
2. Humidity icon
3. Current humidity
4. Control light



HOW TO INSTALL

The regulator should be installed by a qualified person.

WARNING

- Risk of fatal electric shock from touching live connections. Before working on the controller switch off the power supply and prevent it from being accidentally switched on.
- Incorrect connection of wires may damage the regulator!

How to install particular elements:

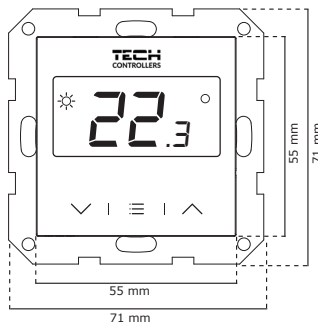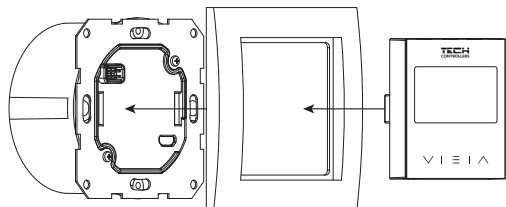

Examples of compatible frames:

TECH Controllers dedicated glass frame - Sinum FG


or

- Ospel - AS
- Berker - S.1, B.1, B.3, B.7
- Jung - AS, A500, A PLUS, A CREATION
- Gira - STANDARD 55, E2, EVENT, ESPRIT, PROFIL55, E22
- SIEMENS - DELTA LINE, DELTA VITA, DELTA MIRO,
- Kopp - ALASKA
- SCHNEIDER - SYSTEM M-PLAN, SYSTEM M-ELEGANCE, M-PURE, M-SMART

Before purchasing a given frame, please check the dimensions carefully as the above list may change!

We recommend purchasing the FG frame, which is dedicated to regulators manufactured by TECH Controllers.

The diagram below illustrate how particular the regulator should be mounted:

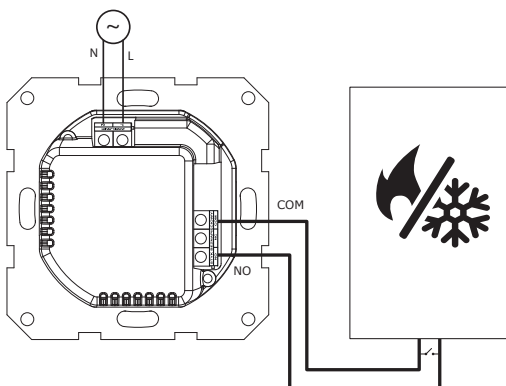

HOW TO CHANGE THE PRE-SET TEMPERATURE

The pre-set zone temperature may be adjusted in the EU-F-2z v1 room regulator by means of buttons \wedge and ∇ .

During inactivity, the screen displays current temperature. Press one of the buttons \wedge or ∇ to display the pre-set temperature value - the digits start flashing. Use the buttons \wedge ∇ to adjust the value.

When a sun icon appears next to the temperature value, it means that the pre-set room temperature has been reached and heating has been disabled. If the sun icon is flashing, the room is being heated and the pre-set temperature hasn't been reached yet.

MENU FUNCTIONS

Press and hold the Menu button to enter the regulator menu. Use the buttons \wedge and ∇ to navigate through menu functions.

1. Operation mode

The „Out“ function enables the user to choose one of the regulator operation modes: heating (HEA) or cooling (Coo). Select Out and when the screen starts flashing, press the Menu button. The screen shows available operation modes (Coo, HEA). Use the buttons \wedge or ∇ to select the mode. In order to confirm changes, wait for about 5 seconds or press the Menu button.

2. Hysteresis

The „His“ function enables the user to set the room temperature hysteresis within the range of 0,2°C to 4°C. Room temperature hysteresis defines the pre-set temperature tolerance in order to prevent undesired oscillation in case of small temperature fluctuation. Example: Pre-set temperature : 23°C Hysteresis: 1°C The room regulator reports that the temperature is too low when the room temperature drops to 22 °C. In order to define the pre-set temperature hysteresis, use the buttons \wedge or ∇ and select a desired value. In order to confirm changes, wait for about 5 seconds or press the Menu button.

3. Calibration

The Cal function enables the user to calibrate the sensor within the range of -10°C to +10°C. Select Cal and when the screen starts flashing, press the Menu button. The screen displays current calibration value. Use the buttons \wedge and ∇ to adjust the value.

4. Auto-lock

The „Loc“ function enables the user to activate the key lock. Select Loc and when the screen starts flashing, press the Menu button. Next, the regulator asks if you want to activate the key lock (YES/NO). Select YES using one of the buttons \wedge or ∇ . Wait 5 seconds to confirm. When the lock is active, the keys are locked after a few seconds of inactivity. To unlock, press and hold both buttons \wedge and ∇ . When the screen displays Loc, select this option again and change it to NO.

5. Min/Max pre-set temperature

This function enables the user to define the minimum (T1) and the maximum (T2) value of the pre-set room temperature. Select this function and when the screen starts flashing, press the Menu button. Use the buttons \wedge or ∇ to adjust the value. In order to confirm changes, wait for about 5 seconds or press the Menu button.

6. Factory settings

The „Def“ function enables the user to restore factory settings. Select this function and when the screen starts flashing, press the Menu button. Next, the regulator asks if you want to restore factory settings (YES/NO). Select the answer using one of the buttons \wedge or ∇ . In order to confirm, wait for about 5 seconds or press the Menu button.

7. Exit the menu

To exit the menu, select the Ret option. The screen flashes for 3 seconds and exits the menu.

NOTE

In order to display the software version number, press and hold the button located on the right side of the regulator.